

Additional Information for Installing the Standard PN 2040-1-1 (p) Voice Alert

This Information is not part of the installation Instructions, but is additional material intended to assist the installer.

1. The system should be hooked to the avionics buss, to prevent voltage variations when starting from causing the system to activate.

2. If any inputs are not used the wires can be left unattached and the system will not be affected.

3. Connections for both positive and ground activation are provided for both the gear lights and throttle switch. You only need to use the ones that applies to your aircraft.

Pin 4, Blue Wire, Gear Light activated by Power

Pin 5, Orange Wire, Gear Light activated by Ground

Pin 7, Yellow Wire, Throttle Switch activated by Ground

Pin 8, Brown Wire, Throttle Switch activated by Power

4. All of the extra voice activation line are activated by ground.