




Checking the Batteries Connection

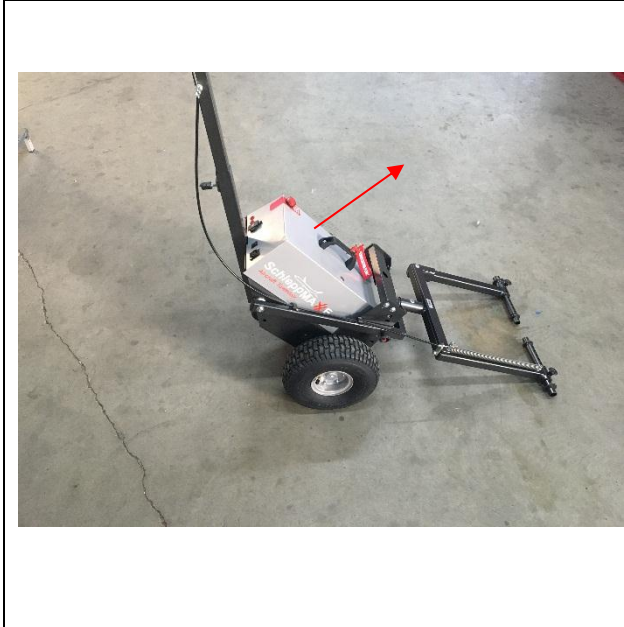

Place the unit like shown in the Photo to check for Connection. Lift the Batterie Case.

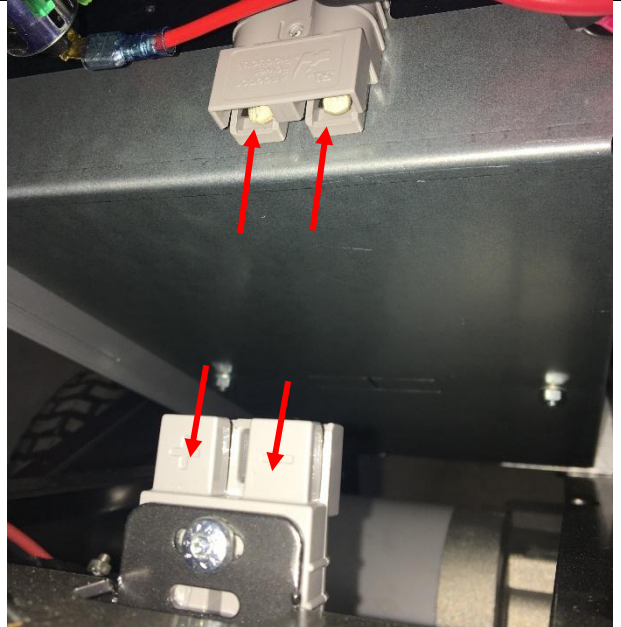

Check both Connectors if each pin is in a good condition and not pushed out or else.

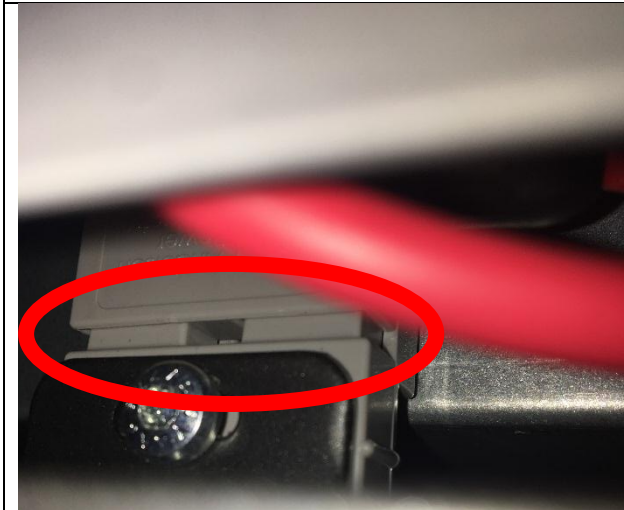

This Photo shows a bad connection!



This Photo shows a good connection!