


# Annunciator Light

0913932

AL-1(X)

9/13/93  
Rev D: 5/10/05

When the Annunciator Light assembly is mounted in front of the pilot, this bright LED gives a quick warning of an out-of-limit condition without having to scan the instrument panel. This single warning light assembly may be connected to one or more E. I. Instruments featuring an External Warning Line (US-8A, SR-8A, R-1, M-1, OPT-1, FP-5, E-1P, T-1P, C-1P, EC-1P, FL-2 etc.). This assembly mounts in a 5/16" hole and measures .4" x 1" depth. It will operate on a 12 or 24 volt system. The "X" in the part number represents the color of the LED (R=Red, G=Green, Y=Yellow, B=Blue, etc.)

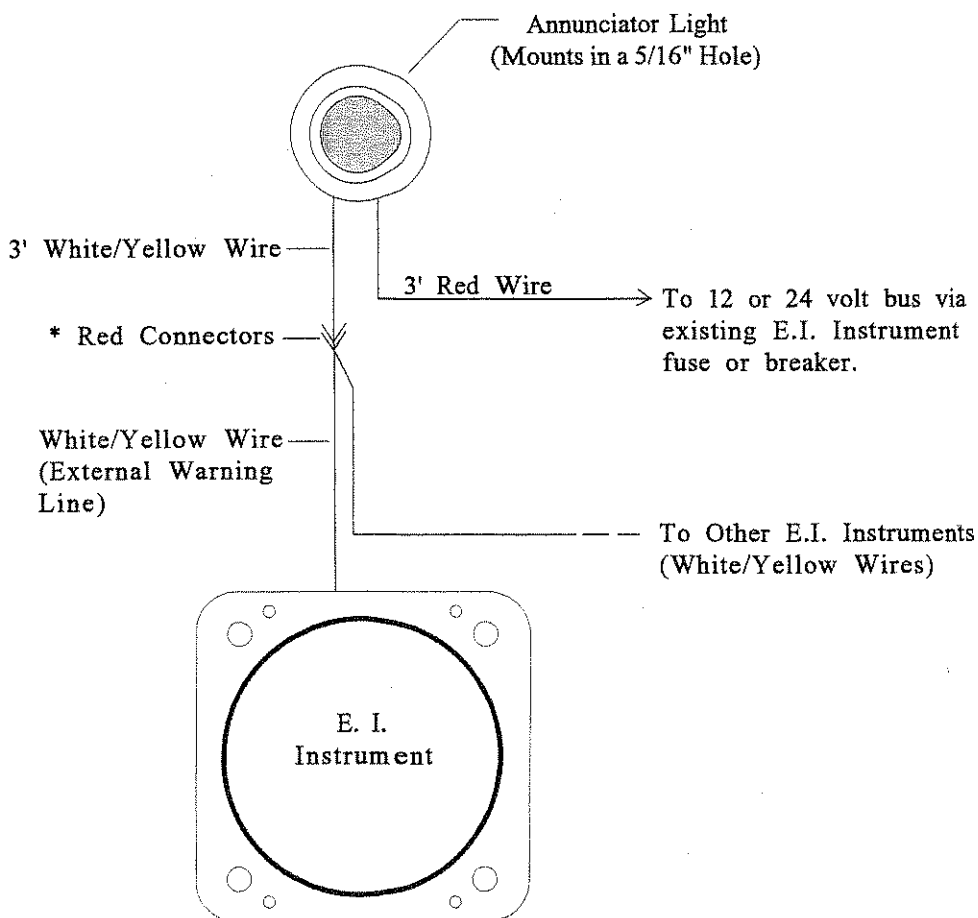

\* Note: When installing the Red Slip-on Connectors double over the wires and double crimp the connectors very tightly. Also, insure the tab is centered in the male connector. If the connectors are disconnected several times the female connector may become loose. If this happens, use a pair of needle nose pliers to retighten the female connector. To protect against corrosion use two drops of oil on the female connector before mating.



**Electronics International Inc.** ®

63296 Powell Butte Hwy, Bend, OR 97701 (541) 318-6060