PER SUPERCUB PA

PA-18 SUPERCUB PARTS

FRONT LOWER WINDOW CHANNEL Left SideP/N 05-00491

AFT LOWER WINDOW CHANNEL

Left SideP/N 05-00492

FRONT WINDOW CHANNEL

Left SideP/N 05-00493 **UPPER WINDOW FORMER**

Left SideP/N 05-00494 FORWARD VERTICAL WINDOW CHANNEL

Left SideP/N 05-00495

AFT VERTICAL WINDOW CHANNEL

Left SideP/N 05-00496

PIPER PA-18 FAIRINGS



Examples of Fairings are for Reference Only!

Description	A/C Model	Part No.	Price
Upper Wing Root Fairing	Piper PA-14, PA-15, PA-16, PA-17, PA-18, PA-20, PA-22	05-14961	
Bottom Front Wing Root Fairing - Left	Piper PA-18	05-07572	
Bottom Front Wing Root Fairing - Right	Piper PA-18	05-07573	
Rear Bottom Fairing - Left	Piper PA-18	05-07574	
Rear Bottom Fairing - Right	Piper PA-18	05-07576	
Wing Root Fairing - Left	Piper PA-18	05-07579	
Wing Root Fairing - Right	Piper PA-18	05-07581	
Fairing Attachment Plate - Left	Piper PA-18	05-07582	
Fairing Attachment Plate - Right	Piper PA-18	05-07583	

ADDITIONAL FAA-PMA PARTS FOR PA18 SUPERCUB

Description	Part No.	Price
Piper hinge - half	05-00510	
Interior tab	05-00511	
Pulley bracket	05-00512	
Pulley bracket	05-00513	
Forward elevator pulley half	05-00514	
Flap lever hinge - weld on fuselage or seat	05-00516	
Shock strut	05-00518	
Fuel selector bracket	05-00520	
Tailspring bracket	05-00521	
Tailspring mount pad - forward	05-00522	
Aileron pulley bracket	05-00523	
Floorboard tabs	05-00525	
Cabane Vee	05-00526	
Elevator horn	05-00530	
Rudder horn blank	05-00531	
RH Rudder Pedal Assembly	05-00532	
LH Rudder Pedal Assembly	05-00533	
RH Brake Pedal Assembly	05-00534	
LH Brake Pedal Assembly	05-00535	
3/8" U Channel - 6' Lengths	05-04564	
Exhaust stack rear - PA18 150 HP	05-07605	
Muffler Assembly - PA18 150 hp	05-00544	

PA18 LANDING GEAR

Specify right or left side. 11/4 axle, heavy duty; FAA-PMA P/N 05-00489 P/N 05-00489 11/2 axle, heavy duty; FAA-PMA LEFT.......P/N 05-00490 1-1/2 Axle, Heavy Duty, FAA/PMAP/N 05-11813

LANDING GEAR AVAILABLE - CALL FOR QUOTE!



REAR TORQUE TUBE SUPPORT & BEARING Weld on; FAA-PMAP/N 05-00497



 
FRONT TORQUE TUBE SUPPORT **& BEARING**

Weld on; FAA-PMAP/N 05-00498



HEAVY DUTY 5/8 LIFT STRUT FORK Rolled threads, stainless, heat treated.

P/N 05-00501



TOP DECK SUPERSTRUCTURE Top Deck P/N 05-00502 \$30 CRATE FEE

JACK SCREW TOWER P/N 05-00503

\$20 CRATE FEE



MUFFLER BAIL U452-093 Muffler Bail Welded inside muffler outlet to guard against

Flame Tube failure and obstruction of exhaust outlet. P/N 05-02150



TAIL REPAIR SECTION - 4' Without Jack screw tower. P/N 05-00504 With Jack screw tower P/N 05-00505 \$20 CRATE FEE



FUEL QUANTITY TRANSMITTER FOR PIPER AIRCRAFT

McFarlane fuel quantity transmitters are a direct replacements for originally installed Stewart Warner type fuel quantity transmitters. Eliminates the need for expensive transmitter conversion kits that require replacement of fuel gauges and wiring. These transmitters are engineered to be compatible with the original fuel quantity gauge and wiring which uses

time proven technology and reliability. Each transmitter is manufactured using the new Stewart Warner "thick film ceramic" resistor tech-nology. The benefits are longer life and increased accuracy. All components are thoroughly tested to ensure reliable operation.

Note: Does NOT include screw/seal assembly or gasket (see accessories to order separately).

MC68101-02 kit	É/N 05-04874		
Accessories - See our website for application information.			
Transmitter MC68101-02	P/N 05-04870		
Gasket MC461-931	P/N 05-04871		
GA Gasket SKET MC462-021	P/N 05-04872		
Pack of 5 - Screw Seal Assv. MC18	02P/N 05-04873-5		