

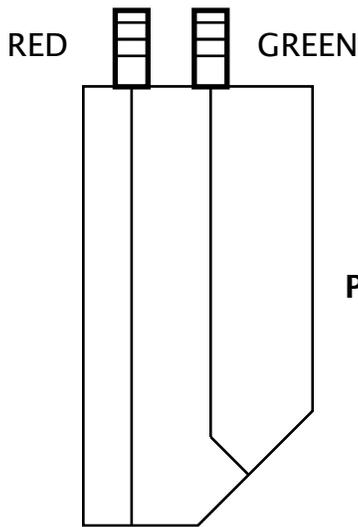


AIR HOSE CONNECTIONS & INITIAL PROBE ALIGNMENT

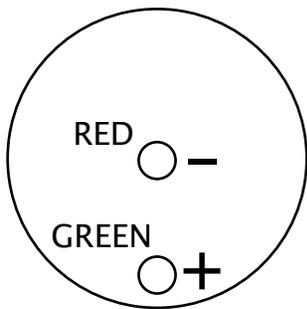


PROBE

NOTE: When installing hoses to probe, separate red and green hoses up to 6" from the end. Cut 1/2" off green hose. Press hoses fully onto barbs.

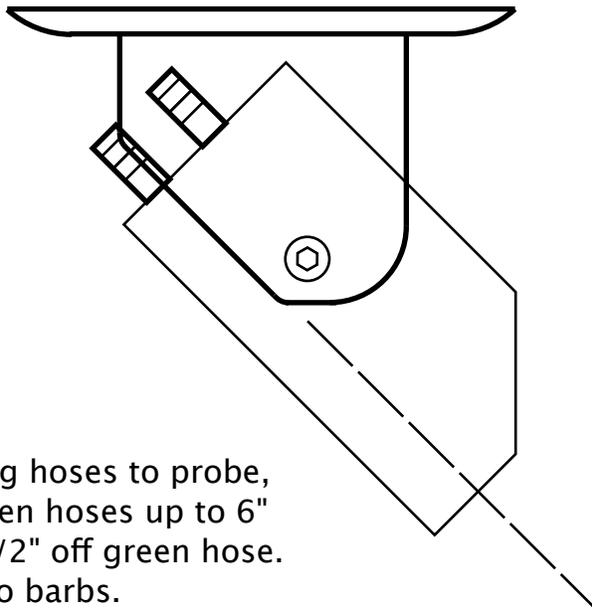


PANEL MOUNT GAUGE

REAR VIEWS OF GAUGES

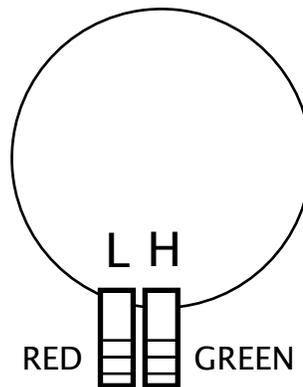

GLARE SHIELD MOUNT GAUGE

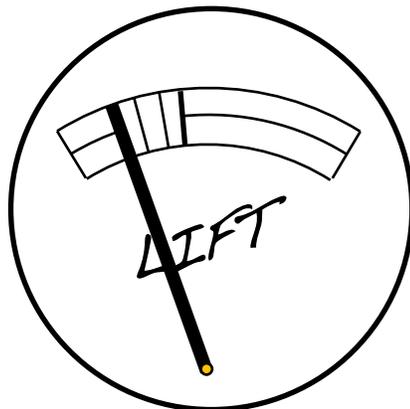

TARGET NEEDLE POSITION